




COOKTOP PARTS

For Model: RF110AXSQ0, RF110AXST0
(Designer White)(Designer Biscuit)

30" ELECTRIC FREESTANDING
STANDARD CLEAN RANGE

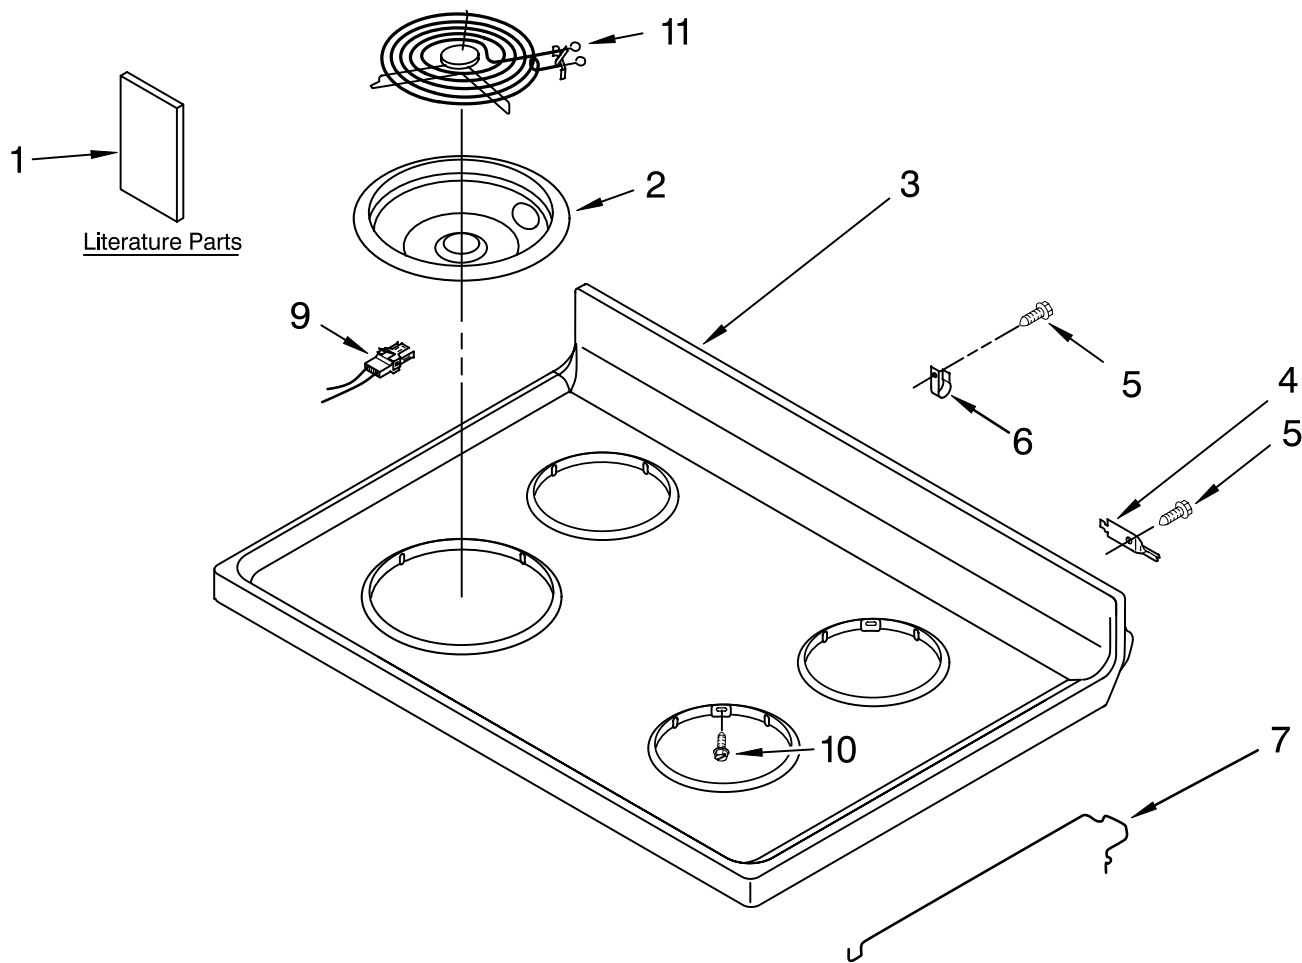

Illus. No.	Part No.	DESCRIPTION
1	9762996	Literature Parts
	9763000	Instructions, Installation
	9762974	Owners Manual
	9762761	Sheet, Tech
	9757142	Safer Cooking Tips
	9757143	Template, Anti-Tip
		English/Spanish
		English/French

Illus. No.	Part No.	DESCRIPTION
2	3195208	Bowl, Drip
	3195209	6" Chrome (3)
		8" Chrome (1)
3	3186235	Cooktop
	8273508	White
		Biscuit
4	3195060	Hinge, Cooktop (2)
5	3196178	Screw


Illus. No.	Part No.	DESCRIPTION
6	308605	Strain Relief
7	3195812	Rod, Support (2)
9	814399	Receptacle, Elmnt
10	3196154	Screw
11		Element, Surface
	9761348	6" (3)
	9761346	8" (1)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: RF110AXSQ0, RF110AXST0

(Designer White)(Designer Biscuit)

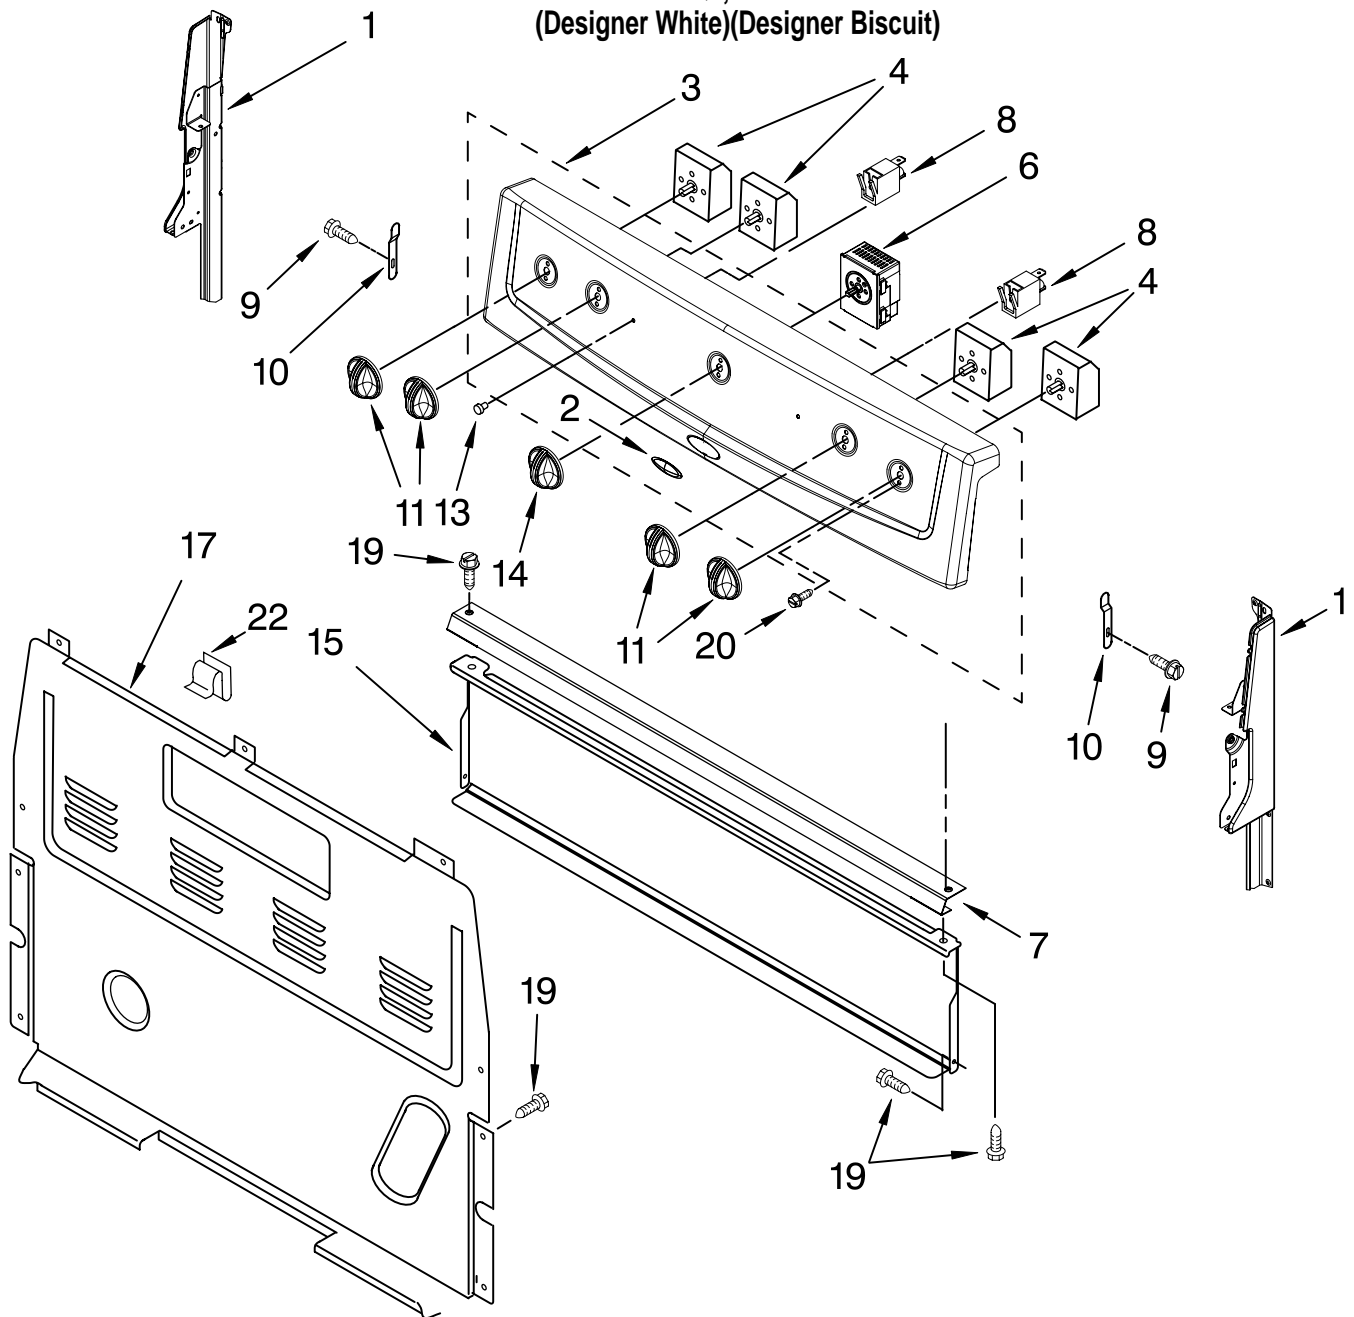

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10009060	Left Hand Biscuit
	W10009040	Left Hand White
	W10009070	Right Hand Biscuit
	W10009050	Right Hand White
2	9757609	Nameplate
3		Panel, Backguard
	9762011	Biscuit
	9762010	White

Illus. No.	Part No.	DESCRIPTION
4		Switch, Infinite
	3148953	Use W/ 8" Element
	3148951	Use W/ 6" Element
6	9762215	Cntrl-Elec ROC60
7	9762095	Brkt-Mntg, Console
8	8523266	Indicator, Oven
9	3196166	Screw
10	3196200	Clip, Spring (2)
11		Knob (4)
	9761963	Biscuit
	9761962	White

Illus. No.	Part No.	DESCRIPTION
13	3196068	Lens, Ind. (2)
14		Knob, Thermostat
	9762525	Biscuit
	9762526	White
15	8053912	Shield, Heat
17	8272473	Cover, Upper Rear
19	3196178	Screw
20	3400882	Screw
22	8273564	Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

**For Model: RF110AXSQ0, RF110AXST0
(Designer White)(Designer Biscuit)**

(Designer White)(Designer Biscuit)



CHASSIS PARTS

For Model: RF110AXSQ0, RF110AXST0
(Designer White)(Designer Biscuit)


Illus. No.	Part No.	DESCRIPTION
1	3169143	Vent Tube
2	3186144	Box, Burner
3		Panel, Side (2)
	8053830	White-Textured
	8272519	Biscuit-Textured
4	9757158	Thermostat
5	3186152	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	W10031780	Screw
9	9760407	Brkt, Mounting
10	9759785	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
12		Frame, Front (Not Serviced)
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	9761935	Foot, Rear (2)
17	9756355	Brkt-Thermostat
18	3195809	Bumper, Side (2)
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
	112432	Nut (3)
22	8274034	Back, Main
23	3196566	Screw
24	9758283	Cover, Box
25	3196567	Screw
26	3196168	Screw
27	3196174	Screw
28	3196165	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
32	8273902	Sensor
34	3196172	Screw
35	3196169	Screw

INSULATION

8273263 Insulation, Wrap
8272611 Insulation, Back

DRAWER & BROILER PARTS

For Model: RF110AXSQ0, RF110AXST0
(Designer White)(Designer Biscuit)

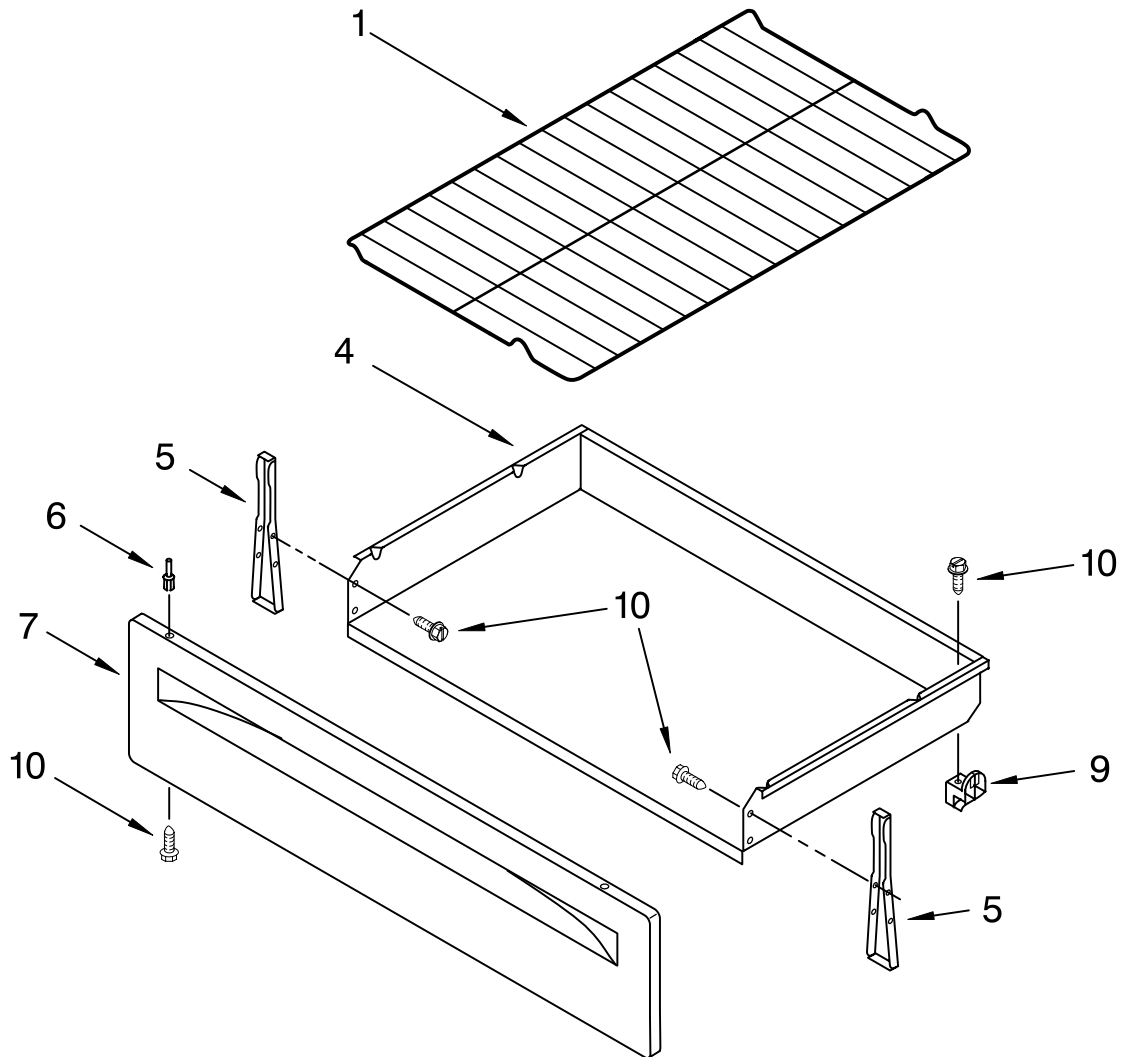


Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
4	9761031	Drawer, Storage
5	9758200	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
	3196815	Almond
7		Panel, Drawer Frnt
	8053339	White
	8272501	Biscuit
9	8053334	Glide, Drawer (2)
10	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Model: RF110AXSQ0, RF110AXST0
(Designer White)(Designer Biscuit)

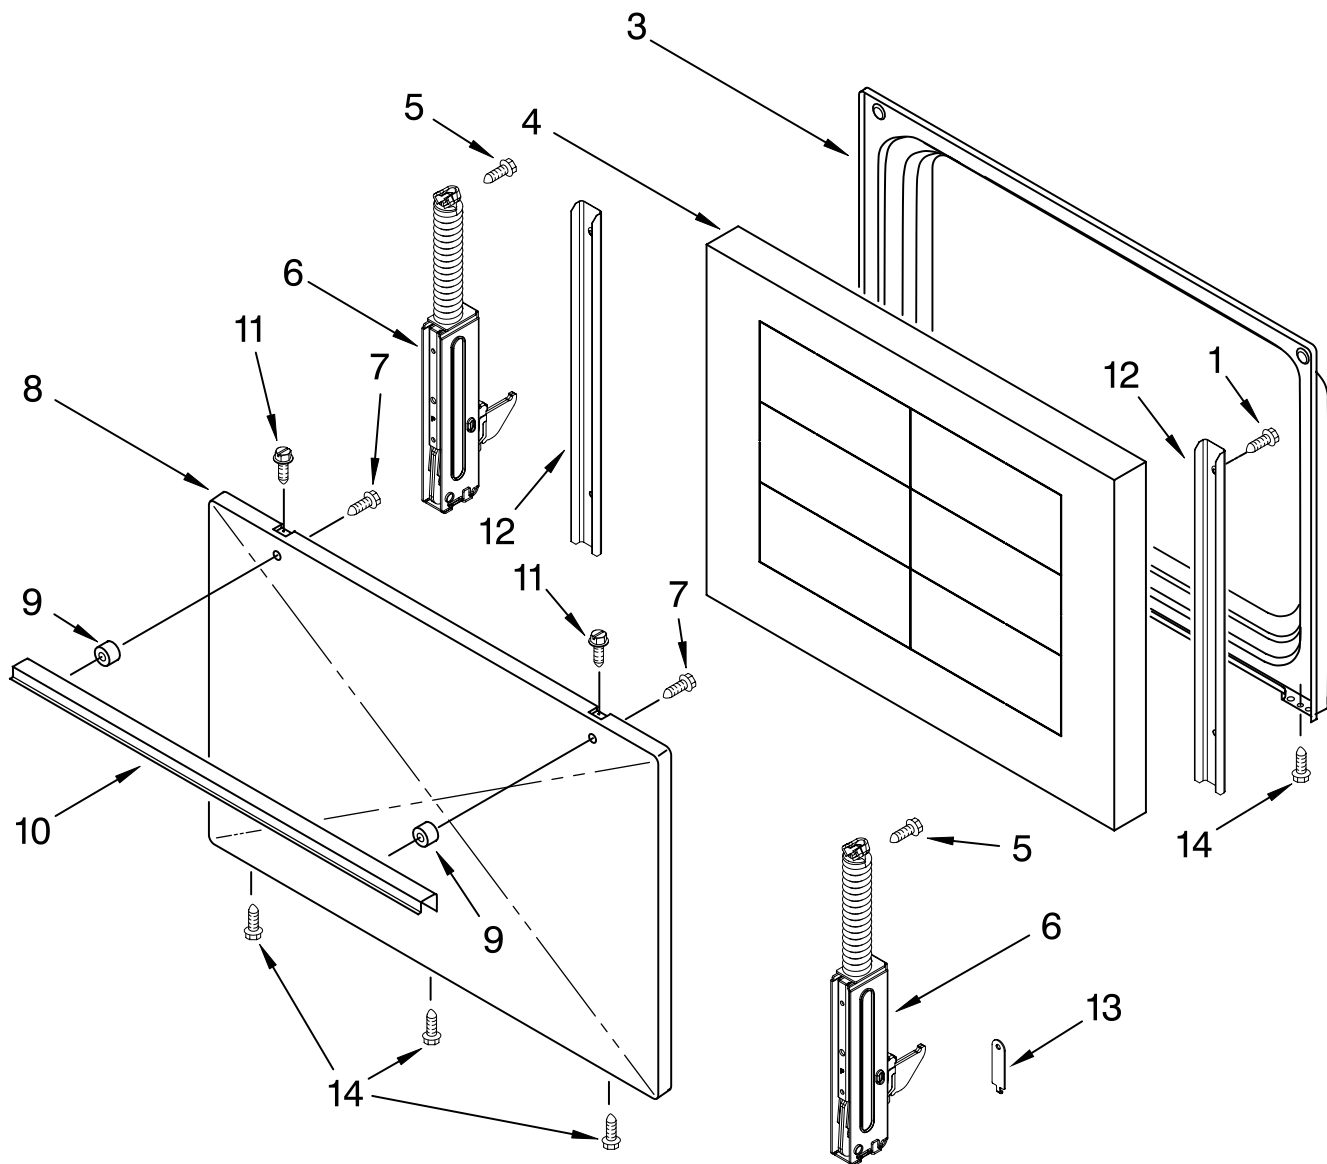

Illus. No.	Part No.	DESCRIPTION
1	W10031790	Screw
3	9761342	Liner
4	8272618	Insulation, Door
5	W10031780	Screw
6	9761495	Hinge (2)
7	3196163	Screw

Illus. No.	Part No.	DESCRIPTION
8	3195560	Panel, Steel
	8273522	White Biscuit
9	3196143	Spacer, Handle
	8273879	White Biscuit
10	3195263	Handle, Oven Door
	8273506	White Biscuit

Illus. No.	Part No.	DESCRIPTION
11	3196558	Screw, Top
	3196559	White Almond
12	9761503	Brkt-Door
13	9761517	Clip-Door, Mntg
14	3196165	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Model: RF110AXSQ0, RF110AXST0
(Designer White)(Designer Biscuit)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

SPLICING WIRES--25FT.

LENGTH

242828	Wire, Black	12 Ga. 150° c
8316781	Wire, Black	14 Ga. 150°c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242827	Wire, Yellow	14 Ga. 150°c

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass
4396923	Pan-Broiler

ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

WIRING HARNESS PARTS

W10036240	Harness, Main
9761476	Harness, Cooktop
3196154	Screw, Grnd-Cktop
3196174	Screw, Grnd-Back
3196520	Clip, Wire Harness
311227	Wire, Ground
313660	Clip, Ground Wire

Miscellaneous

814381	Pin Kit-Dr Removal
--------	--------------------

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST